


Installation Method


01

Thread the nut into the network cable.

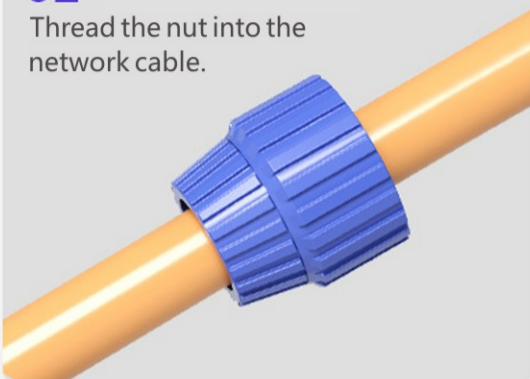

02

Use a cable stripper to peel off the jacket of the network cable.

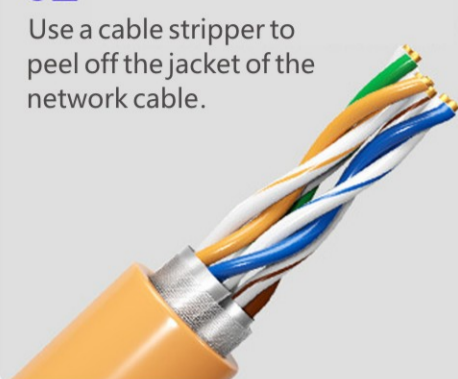

03

Insert the cable wires through the round hole and press the other end into the cable organizer in accordance with the sequence of scheme B.



04

Cut off the excessive wires.



05

Press the cable organizer according to the sequence label into the IDC.


As shown in the figure corresponding to scheme B sequence:



Figure 1 From bottom to top:
green white, green, brown white, brown



Figure 2 From top to bottom:
blue white, blue, orange,
orange white

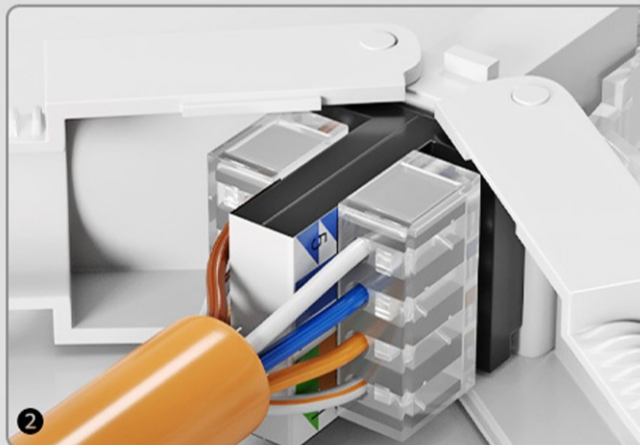

06

Close the lid and press to close. Screw on the nuts to complete the installation.

