

Picture of real products




TOLERANCE	±MM	PART DESCRIPTION		PART NO.	
X	---	Fiber Optic Cleaner		105553	
		A-M600/MPO/500			
X.X	---	DRAWN	CHKD	APROVED	
		J.LI	F.SUN	Dylan Chen	
X.XX	---	SCALE	UNIT	QTY	PAGE
		---	mm	1 PCS	1 OF 3
X.XXX	---	THIRD ANGLE PROJECTION			
REV	---				
P/N	---				


01	First Issue			J.LI	08-22-2024
REV	REVISION RECORD DESP.	ECN.NO	ZONE	BY	DATE

Cleaning a Connector in an Adaptor


A、 Remove the attachment from the guide.

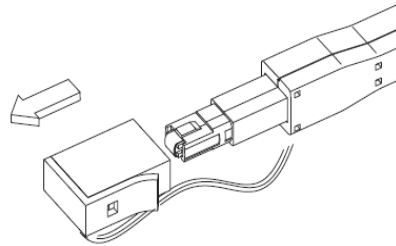

B、 Align the adaptor and the guide key. Insert the guide straight into the adaptor until the insertion mark is completely hidden.

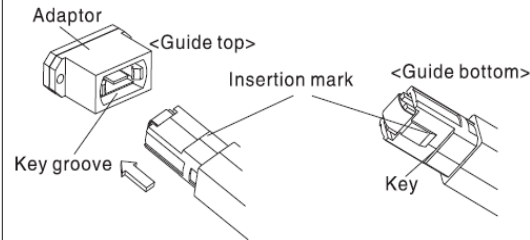


C、 Push the main body straight into the adaptor. When you hear the click sound, the cleaning is completed. Stop pushing and pull straight out.

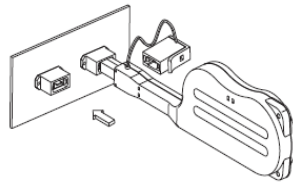

#When pushing, do not apply excessive force or apply force in a different direction than indicated by the arrow.


Cleaning an Optical Connector Plug

A、 Remove the attachment from the Guide. Align the attachment and the optical connector plug key. Insert the plug straight into the attachment and push until you hear the click sound

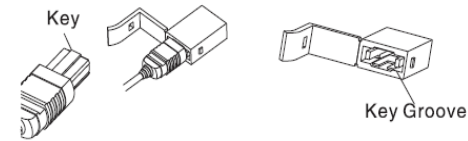


When pushing in, hold the attachment firmly between your fingers.

B、 Align the attachment and the guide key. Insert the guide straight into the attachment and push in until it reaches the attachment insertion point.

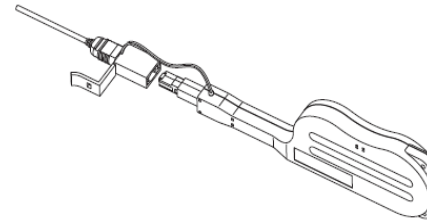

C、 Insert the main body straight in to the Optical Connector Plug. When you hear the click sound, the cleaning is completed. Stop pushing and remove straight out.

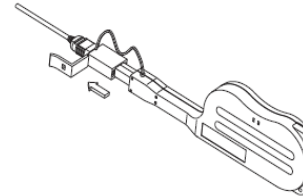

#When pushing, do not apply excessive force or apply force in a different direction than indicated by the arrow.

Optical Connector Cleaner: Cleaning a Connector in an Adapter and Cleaning an Optical Connector Plug.  
Cleanable frequency: More than 600 times.

DRAWN J,LI		CHKD F,SUN		APROVED Dylan Chen
SCALE —	UNIT mm	QTY 1 PCS	PAGE 2 OF 3	THIRD ANGLE PROJECTION 